



1/10 SCALE MONSTER TRUCK OWNERS MANUAL

IMPORTANT LINKS:

Link to the most recent version of this manual with exploded views and parts lists: www.redcatracing.com/manuals/VOLCANOEPXPROMANUAL.pdf $\,$

Link to electric vehicles manual: www.redcatracing.com/manuals/ELECTRIC-MANUAL.pdf



WARNING!

READ ALL INSTRUCTIONS INCLUDED WITH VEHICLE BEFORE OPERATING



AGE WARNING!

This radio controlled (RC) vehicle is not a toy! You must be 14 years of age or older to operate this vehicle. Adult supervision is required.



RISK OF RUNAWAY VEHICLE OR INJURY!

Never turn on the vehicle or plug in the battery pack without first having the controller turned on.



RISK OF FIRE! / RISK OF EXPLOSION!

There is a risk of fire and explosion when dealing with batteries. Rechargeable batteries may become hot and catch fire if left unattended or charged too quickly. Use extra caution when charging LiPO batteries. Use only LiPO specific chargers. Use a LiPO safe charging pouch when charging LiPOs. Charge away from flammable materials. Never charge at a rate higher than 1C. {2000Mah pack= 2amps charge rate). Overcharging can lead to fire and explosion. Always store battery packs in a cool dry place.



RISK OF BURNS!

The batteries, electronic speed controller (ESC), electric motor, and other areas of the vehicle can get hot. Burns can occur if touched after vehicle operation. Allow adequate time to cool before handling.



RISK OF ELECTRICAL SHOCK!

Use caution when charging batteries. Do not touch positive and negative leads together. Do not lay battery on metal. Use only chargers specified for the battery type being charged. Keep batteries and chargers away from water



RISK OF INJURY!

Hobby grade RC vehicles can cause serious injury or death if not operated correctly. Never use vehicle in crowds. Never chase people or animals. Drive in safe open areas only. Keep body parts away from moving parts.



RISK OF DAMAGE!

Never operate RC vehicles on public roads. Damage of vehicle and property can occur. Only operate on open private property. Never charge the battery pack while it is still plugged into the RC vehicle. Always unplug the battery pack from the electronic speed controller (ESC) and remove the battery from the RC vehicle before charging. Failure to do so will result in damage to the vehicle's electronics.



Warning!

Do not mix old and new batteries. Do not mix alkaline, lithium, standard (carbon zinc), or rechargeable (nickel cadmium) batteries. Do not change or charge batteries in a hazardous location.



FCC Compliance Statement! The radio included with your vehicle complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operations. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

WARNING: While operating the Radio, a separation distance of at least 20 centimeters must be maintained between the radiating antenna and the body of the user or nearby persons in order to meet the FCC RF exposure guidelines.

FEATURES & SPECIFICATIONS

• Electric Brushless 3300KV RC-540 Motor

• Brushless ESC (2S LIPO Ready)

4 Wheel Drive

Oil Filled Shocks

7.4V LIPO Battery

• LIPO Charger Included

• 2.4GHz Radio System

• Scale: 1/10

• Length: 400mm

· Width: 310mm

• Height: 185mm

• Wheelbase: 275mm

• Ground Clearance: 30mm

VEHICLE OVERVIEW

A: On/Off Switch

B: Motor

C: ESC

D: Receiver


E: Steering Servo

F: Steering Linkage

G: Battery


H: Battery Hold Down

I: Battery Connector

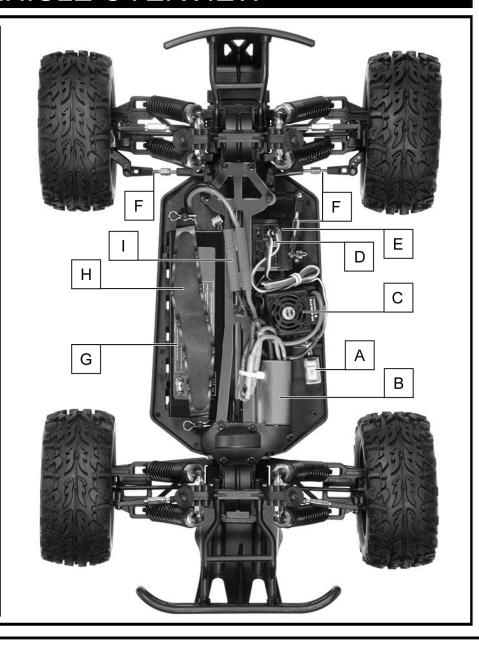

RADIO GUIDE

CONTROL PANEL

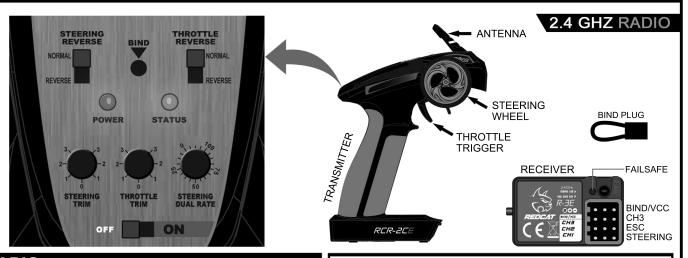

RADIO:

Steering Reverse Switch: Top left switch. Used to change steering orientation. If the car turns right when you steer left, flip this switch.

Throttle Reverse Switch: Top right switch. Used to change throttle trigger orientation. If the car goes in reverse while you pull the throttle trigger, flip this switch.

Power LED: Left LED light. Lights up when the transmitter is turned on.

<u>Status LED</u>: Right LED light. Lights up green when transmitter batteries are full. Flashes when transmitter batteries are low and need replacing.

<u>Bind Button:</u> Used to bind the transmitter to the receiver. See binding instructions.

<u>Steering Trim:</u> Left knob. Used to set the steering neutral point. If the vehicle veers in one direction while the steering wheel is centered, turn this knob in the opposite direction until the car drives straight.

Throttle Trim: Middle knob. Used to set the throttle neutral point. If the vehicle moves forward or reverse while the throttle trigger is centered, turn this knob until the vehicle remains still. For maximum setting, turn slowly until the vehicle creeps forward, then turn the knob the opposite direction until the car stops.

Steering Dual Rate: Right knob. Used to limit the amount of steering. 0= little/no steering & 100= maximum steering. Set the knob to the amount of steering you feel comfortable with. If the vehicle has a tendency to spin out, lower the steering rate.

On/Off Switch: Bottom switch. Turns transmitter On and Off.

RECEIVER:

BIND/VCC: Used when binding to transmitter.

Ch3: Used for 3rd channel when needed.

Ch2: Used for electronic speed controller (ESC).

Ch1: Used for steering servo.

Failsafe Button: Used to set failsafe.

BINDING:

- Insert the BIND PLUG into the receiver BIND port.
- Make sure your ESC is plugged into CH2, and insert the bind plug into BIND/VCC. Now, power the vehicle on and the receiver light should begin to blink red.
- 3. Press the BIND button in the center of the transmitter's Control Panel and turn on radio.
- 4. Release the bind button when you see the green light on the radio flashing. At this point, your receiver's LED light should pause for approximately 1 second and then blink slowly. Turn off the power to your vehicle, as well as the radio.
- 5. Remove the BIND PLUG from the receiver. Make sure the servos and ESC are attached as described above.
- 6. First turn your radio on, then your vehicle as normal. Your radio and receiver should be bound together and communicating with each other.

LIPO CHARGER

Specifications: HX-A3 Charger

AC input: 100-240V

Charges LiPo batteries: 2S - 3S
Charge current: 900mAh x 3

Two output ports: 1x2S, 1x3S LiPo Balance


ports

- ATTENTION -

When plugging the battery pack into the ESC, make sure the plugs are lined up correctly!



Ensure POS+ wire is connected to POS+ & NEG- is connected to NEG-

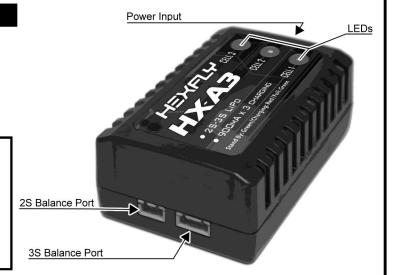

Charging Instructions:


- 1. Plug the charger into an AC power supply (100-240V)
- 2. Once connected to a power supply, all the LED lights will turn green.
- 3. Plug in a 2S or 3S LiPo battery, that has been unplugged and removed from the RC vehicle, into the corresponding balance port. 2S for 2S battery packs & 3S for 3S battery Packs. NOTE: LiPo batteries have 2 plugs on them, 1x main plug (large plug used to plug into the RC car) & 1x balance plug (small white plug used for charging). ENSURE THE LARGE MAIN PLUG IS DISCONNECTED FROM THE VEHICLE AND ISN'T PLUGGED INTO ANYTHING WHILE CHARGING THE BATTERY WITH THE HX-A3 CHARGER!
- 4. LED lights will turn red. This means the battery is charging.
- 5. LED lights turn green when the corresponding battery cells are fully charged. When all LEDs are green, the battery pack is completely charged.
- 6. Unplug the battery pack from the charger.
- 7. Unplug the charger from the power supply.

Marnings:


- Unplug battery from ESC and remove battery from vehicle BEFORE plugging battery into charger.
- Do Not plug the battery into a vehicle while the battery is plugged into the charger. Damage to the ESC and charger may occur.
- Read the entire manual carefully before attempting to plug in or attempting to use the charger.
- Keep charger, included hardware, and batteries away from water, corrosive gases, dust, and damp environments.
- Only charge LiPo batteries. Cell count: 1 x 2S or 1 x 3S
- Do not attempt to charge 2S and 3S batteries at the same time, one or the other!
- Incorrect connections may cause permanent damage to batteries, charger, property, and persons.
- Only use included cables, adapters, and accessories, as others may cause permanent damage to batteries, charger, property, and persons.

Warranty Info:

This product includes a 90 day warranty against factory defects. Warranty starts at date of purchase and the original product receipt is necessary for all warranty claims. This warranty does not cover improper use or any use other than specified as proper use in this manual.

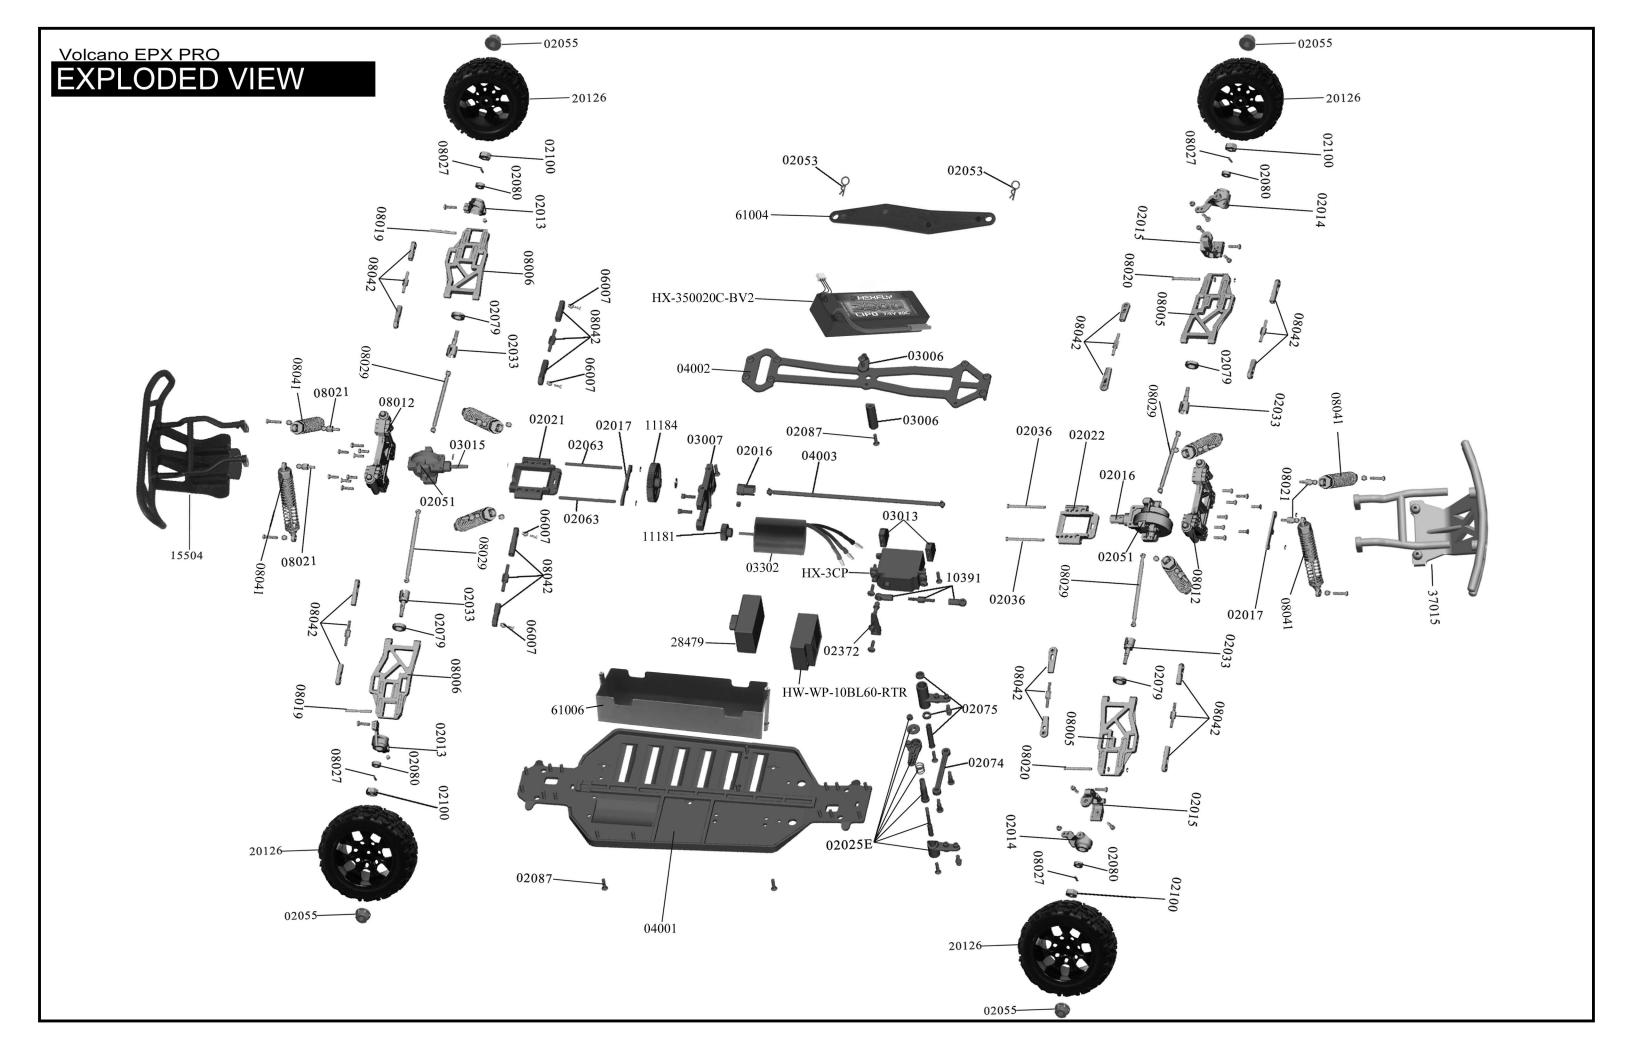

EXPLODED VIEWS

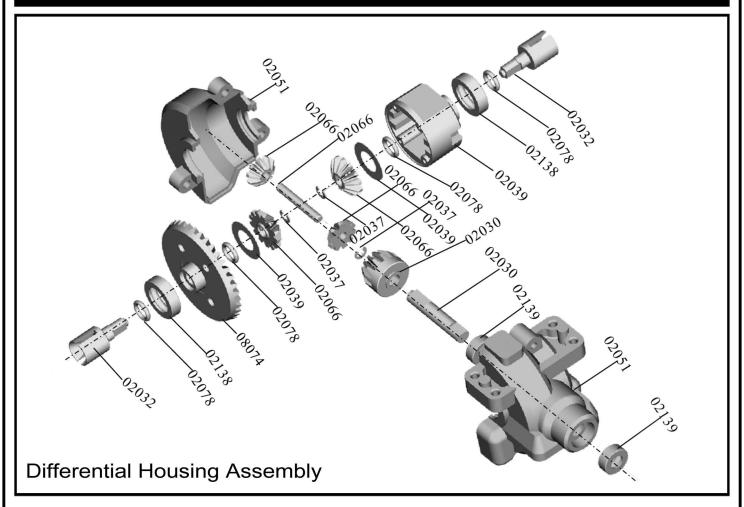

PARTS IDENTIFICATION

08005- Front Lower Suspension Arm	08006- Rear Lower Suspension Arm	02014-Steering Hubs (L/R)	02015-Front Hub Carrier(L/R)	02013-Rear Upright+ Set Screws
TO STATE OF THE PARTY OF THE PA		50	Po	-
02033-Wheel Axle	02016-Universal Joint Cup B+ Grub Screw	02032-Universal Joint Cup C	02021-Rear Suspension Arm Holder	02022-Front Suspension Arm Holder
	Si	##	0	O
15504 - Rear Bumper	37015 - Front Bumper	08012- Fron/Rear Shock Tower	08041-Aluminum Shock Absorber	03302-Brushless Motor KV:3300
			Control of the state of the sta	


PARTS IDENTIFICATION

HW-WP-10BL60-RTR - Hobbywing 60A Brushless Speed Controller	03007-Motor Mount	04001-Chassis	04002-Upper Chassis Brace	03013-Radio Tray Mounts
		HIIII	8	
61004- Battery Strap	HX-350020C-BV2 3500mAh 20C 7.4V 2S LIPO Battery	HX-A3 - Hexfly LIPO Charger (2S or 3S)	61006- Battery Case	02074-Steering Joint
	To the state of th			111 40
02025E-Servo Saver Set	02075-Steering Assembly B	03401-Gear Cover	02053-R- Clip	11184-Diff. MainGear (64T) Metal
A.		90		
11181-Pinion Gear Metal (21T)	08074-Crown Gear (38T) (Copper infiltration)	02030-Drive Gear	02024-Diff.Gear Complete	03015-Drive Shaft+ E-Clip
and the same of th	00			ر ر
02066-Diff.Planetary Gears + Pin	02039-Differential Box (W/ 2 Shims + Washers)	02051-Gear Box	10391-Servo Link	08042-Front/Rear Link
\$\\ \tau_{\tau}\	0 000	Tielle .	000	
08007- Body Post	08029-Dogbones 90mm Front/Rear qty 2	08027- Pin 2*10	08019- Rear Lower Arm Pin B 3*30mm	08020- Front Lower Arm Pin B 3*33mm
111		企企		1
02036-Front Lower Arm Pins A 3*44mm	02063-Rear Lower Arm Pin A 3*54mm	04003-Center Dogbone	02057-Antenna Pipe	03006-Antenna Mount
				/6
02372-Servo Arm	02017-Suspension Reinforcement Brace	20126-Wheel/Tire Set qty 2	02095-M3*8 Column Head Machine Screw 4P	02093-M3*10 Column Head Machine Screw 10P
99			-4	MININ

PARTS IDENTIFICATION

02096-3*10 Cap Head Machine Screw 6P	02097-Cap Head Machine Screw 3*14 6P	08024- Washer Screw M3*11 8P	02083-Cap Head Self- Tapping Screw3*12 6P	02081-Cap Head Self- Tapping Screw 3*8 6P
111	111	44 <u>7</u>	ATTI	於
02101- Steering Bushing	02082-Cap Head Self- Tapping Screw 3*10 10P	02100- Wheel Hex.	02085-Round Head Self-Tapping Screw 2*8 8P	02037-E-Clip (Φ7Φ4Φ2.5Φ2.3)
	7,32,	0000	र्गााा	E 300
02139-Ball Bearing 10*5*4	02138-Ball Bearing 15*10*4	02078-Differential O-Ring	02079-Bushing 15*10*4	02080-Bushing 5*10*4
6666	888	0000	000	6 6666
06007-Shock Swivel Ball Insert	02055-M4 Nylon Lock Nut	02102- M3 Nylon Lock Nut	08021- Upper Shock Ball Studs	01083-Round Head Machine Screw 3*11 6P
86	0000			11111
06023-Shock Ball Studs B Female Thread	02038-Ball Studs	02099- Grub Screw M4*4	02098- Grub Screw M3*4	02127-M3*14 Grub Hex. Screw 10P
	The same	*****	0000	// ///
02087-Countersunk Cross Head Self- Tapping Screw 3*10 15P	02088-Countersunk Cross Head Self- Tapping Screw 3*14	02089-Countersunk Cross Head Self- Tapping Screw 3*15	02086-Round Head Self-Tapping Screw 2*10 10P	02092-ISO 3*10 Screw 8P
念色		伦	1111	1151
81220-5-Flat Head Machine Screw 3*14 4P	28479- 2.4GHz Receiver	RCR-2CNR- 2.4GHz Transmitter	HX-3CP- Hexfly 3Kg Servo	

OPTIONAL PERFORMANCE PARTS

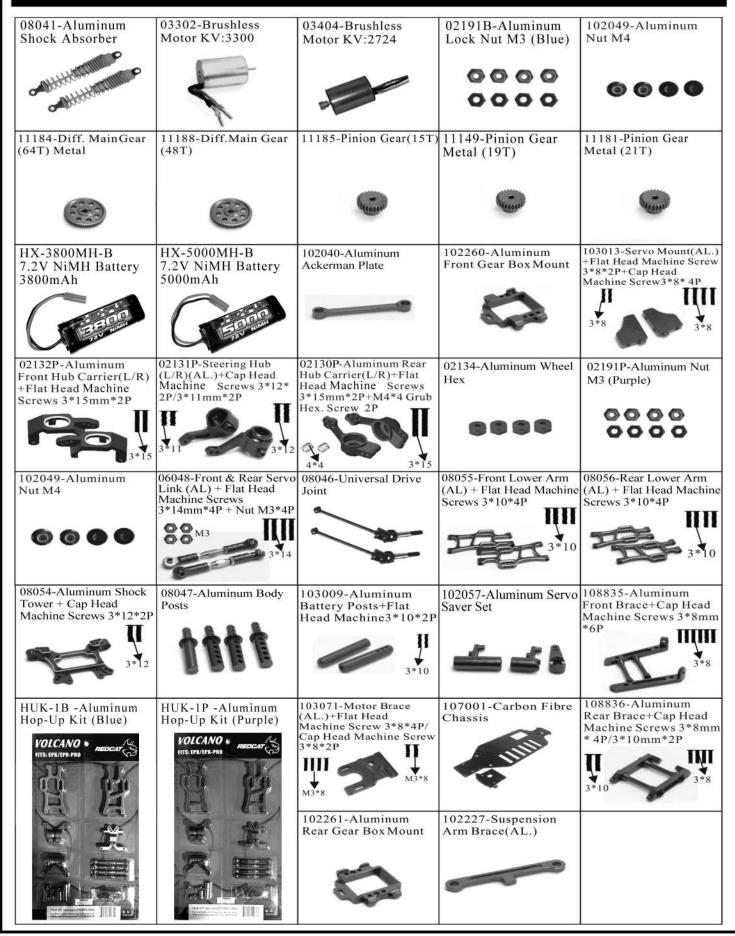



WWW.REDCATRACING.COM

Follow us on social media

Take a photo, create a video, post and share your Redcat experience.

Stay up to date on the latest Redcat news, products, and creative content. While these profiles are not customer service channels, you might find that one of our subject experts or another member of the community is able to assist you. If you have an issue or need technical and or product support, please reach out to Redcat directly through our website.

f https://www.facebook.com/RedcatRacing

https://www.instagram.com/RedcatRacing

https://www.youtube.com/RedcatRacing

https://www.twitter.com/RedcatRacing

https://www.pinterest.com/RedcatRacing

IMPORTANT LINKS:

Link to the most recent version of this manual with exploded views and parts lists: www.redcatracing.com/manuals/VOLCANOEPXPROMANUAL.pdf

Link to electric vehicles manual: www.redcatracing.com/manuals/ELECTRIC-MANUAL.pdf